



NEUTRALIZER TOP AND BALL RETAINER REPLACEMENT:

- 1.) REMOVE SLOPE NEUTRALIZER TOP SCREWS. (A)
- 2.) REMOVE BALL RETAINER AND DISCARD. (B)
- 3.) INSTALL NEW BALL RETAINER (C)
- 4.) MAKE CERTAIN THE SMALLER BALLS (D) ARE PLACED ON TOP OF THE LARGER BALLS (E)
NOTE ONLY ONE SMALLER BALL PER RETAINER PER 4"/10 CM REDUCTION UNITS AND TWO FOR 6".15 CM REDUCTION UNITS.
- 5.) INSTALL SLOPE NEUTRALIZER CAP (F) AND SCREWS (A)

PLEASE NOTE: IF THE EXISTING SLOPE NEUTRALIZER CAP HAS TWO PROTRUDING RINGS (G) DISCARD AND REPLACE WITH A NEWER VERSION WITHOUT THE PROTRUDING RINGS (F)



FIELD FIX: SLOPE NEUTRALIZER

PART NR.:

DATE: 01-17-06

REVISION: 1

GL1058